

FIG. 1

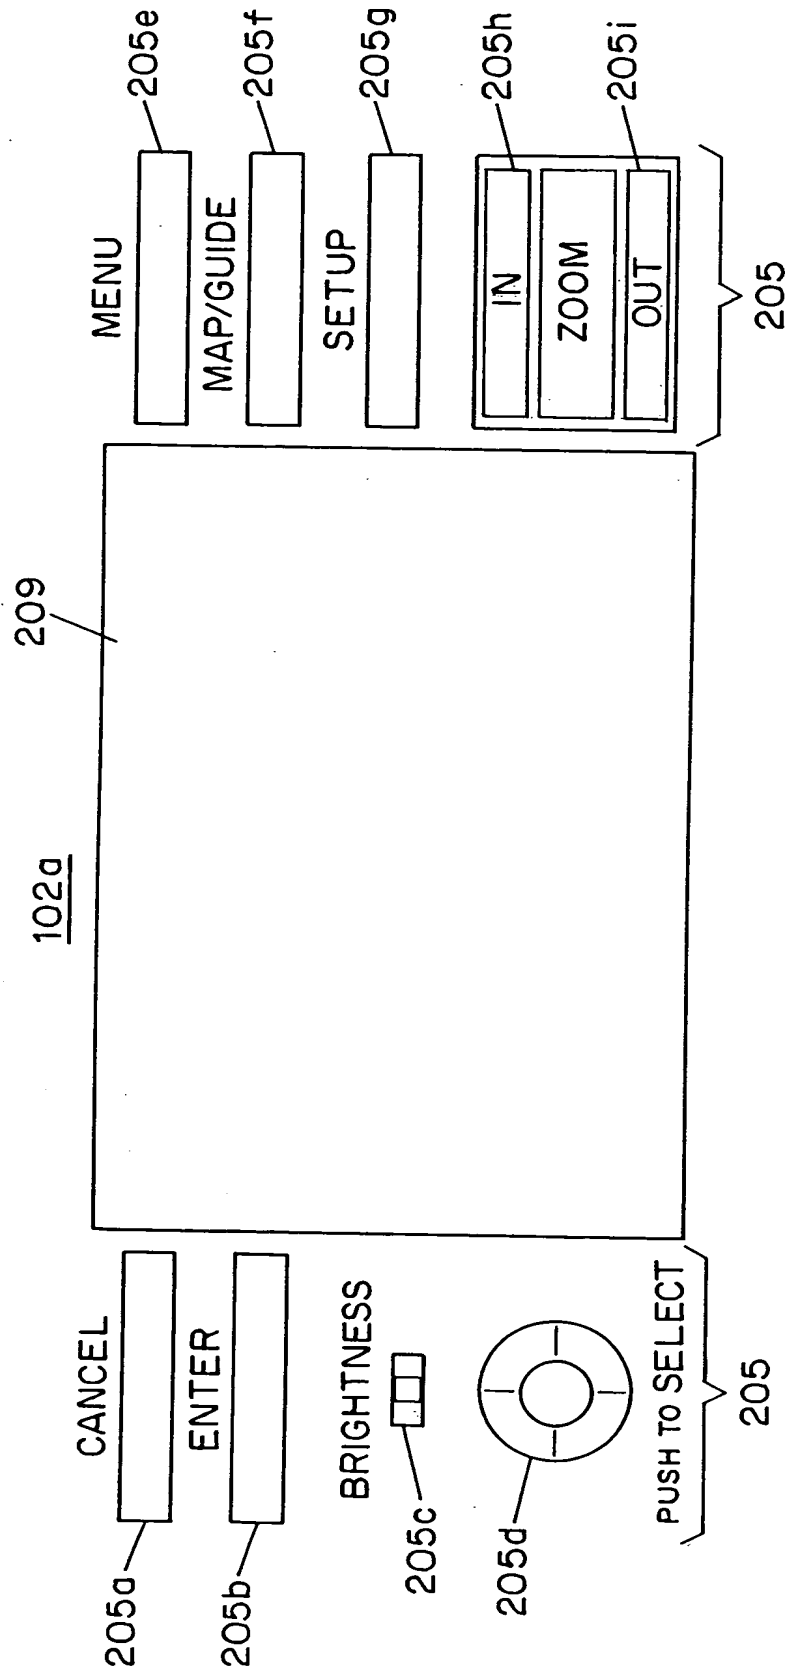


FIG. 2

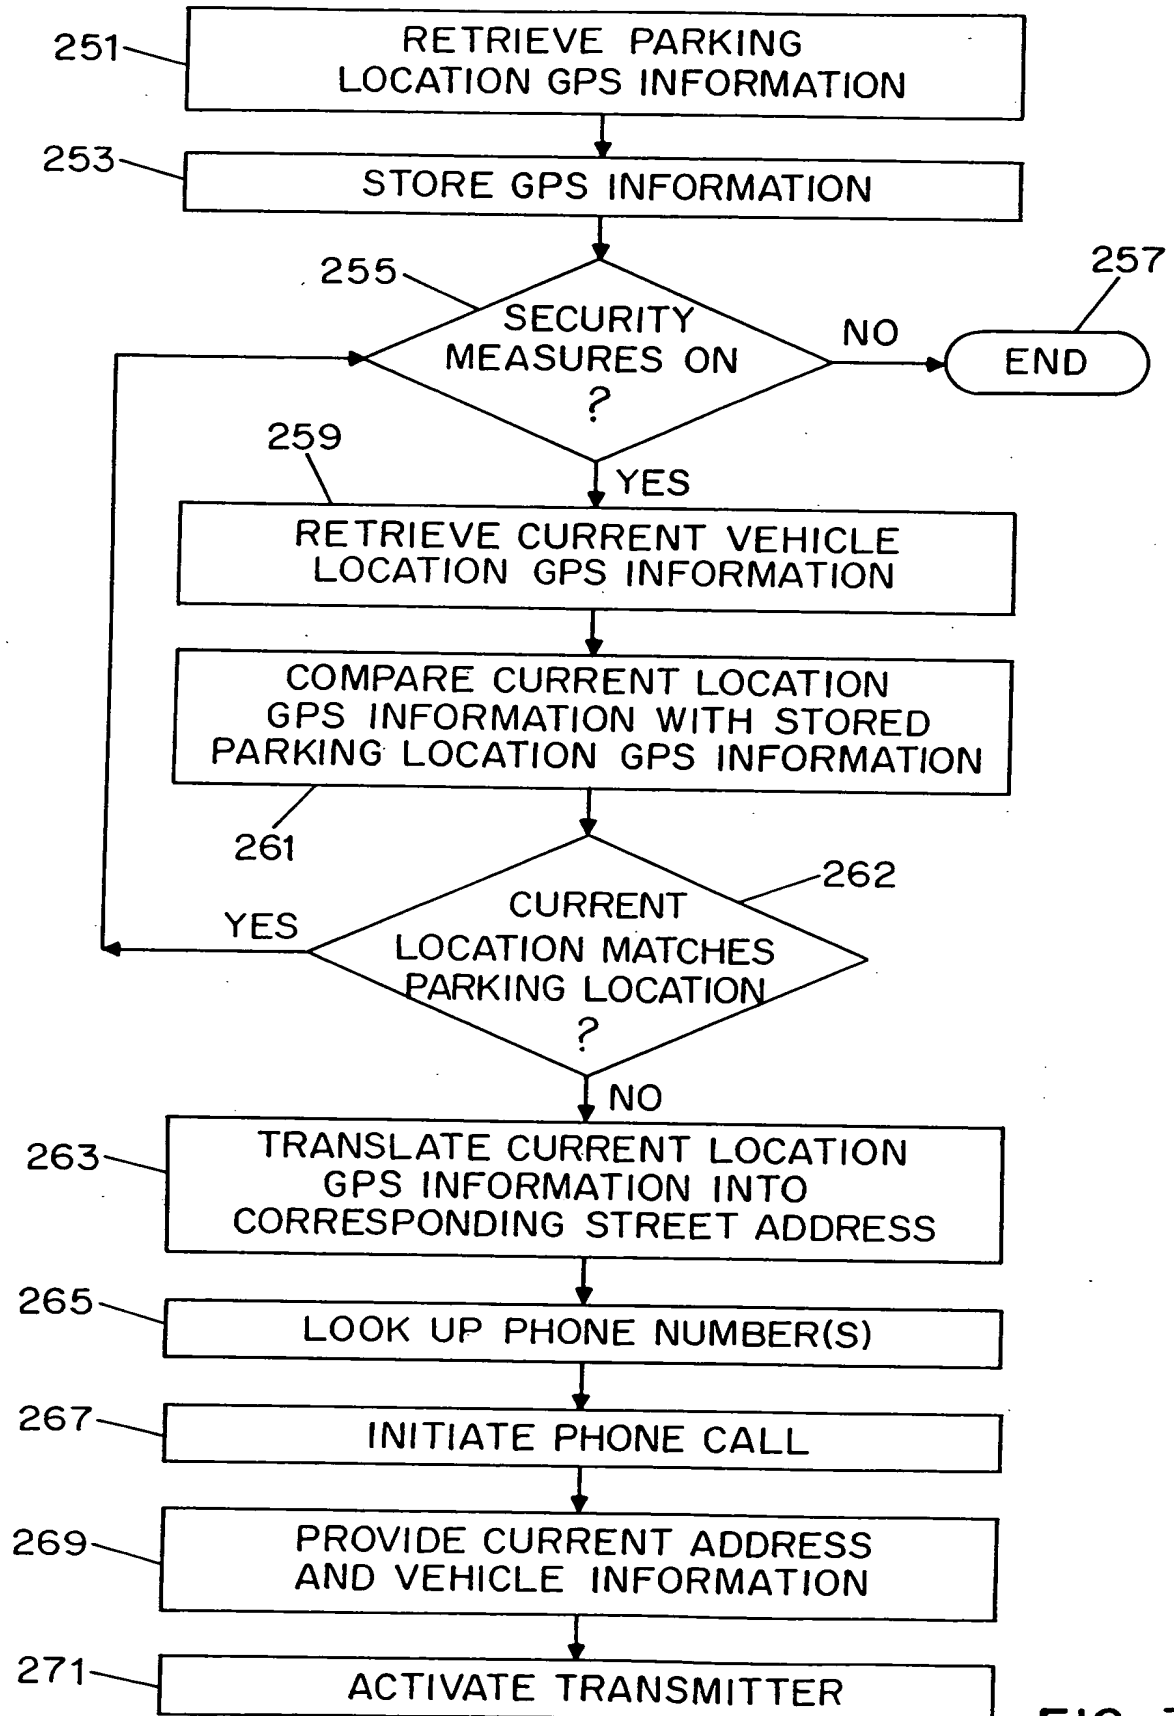


FIG. 3A

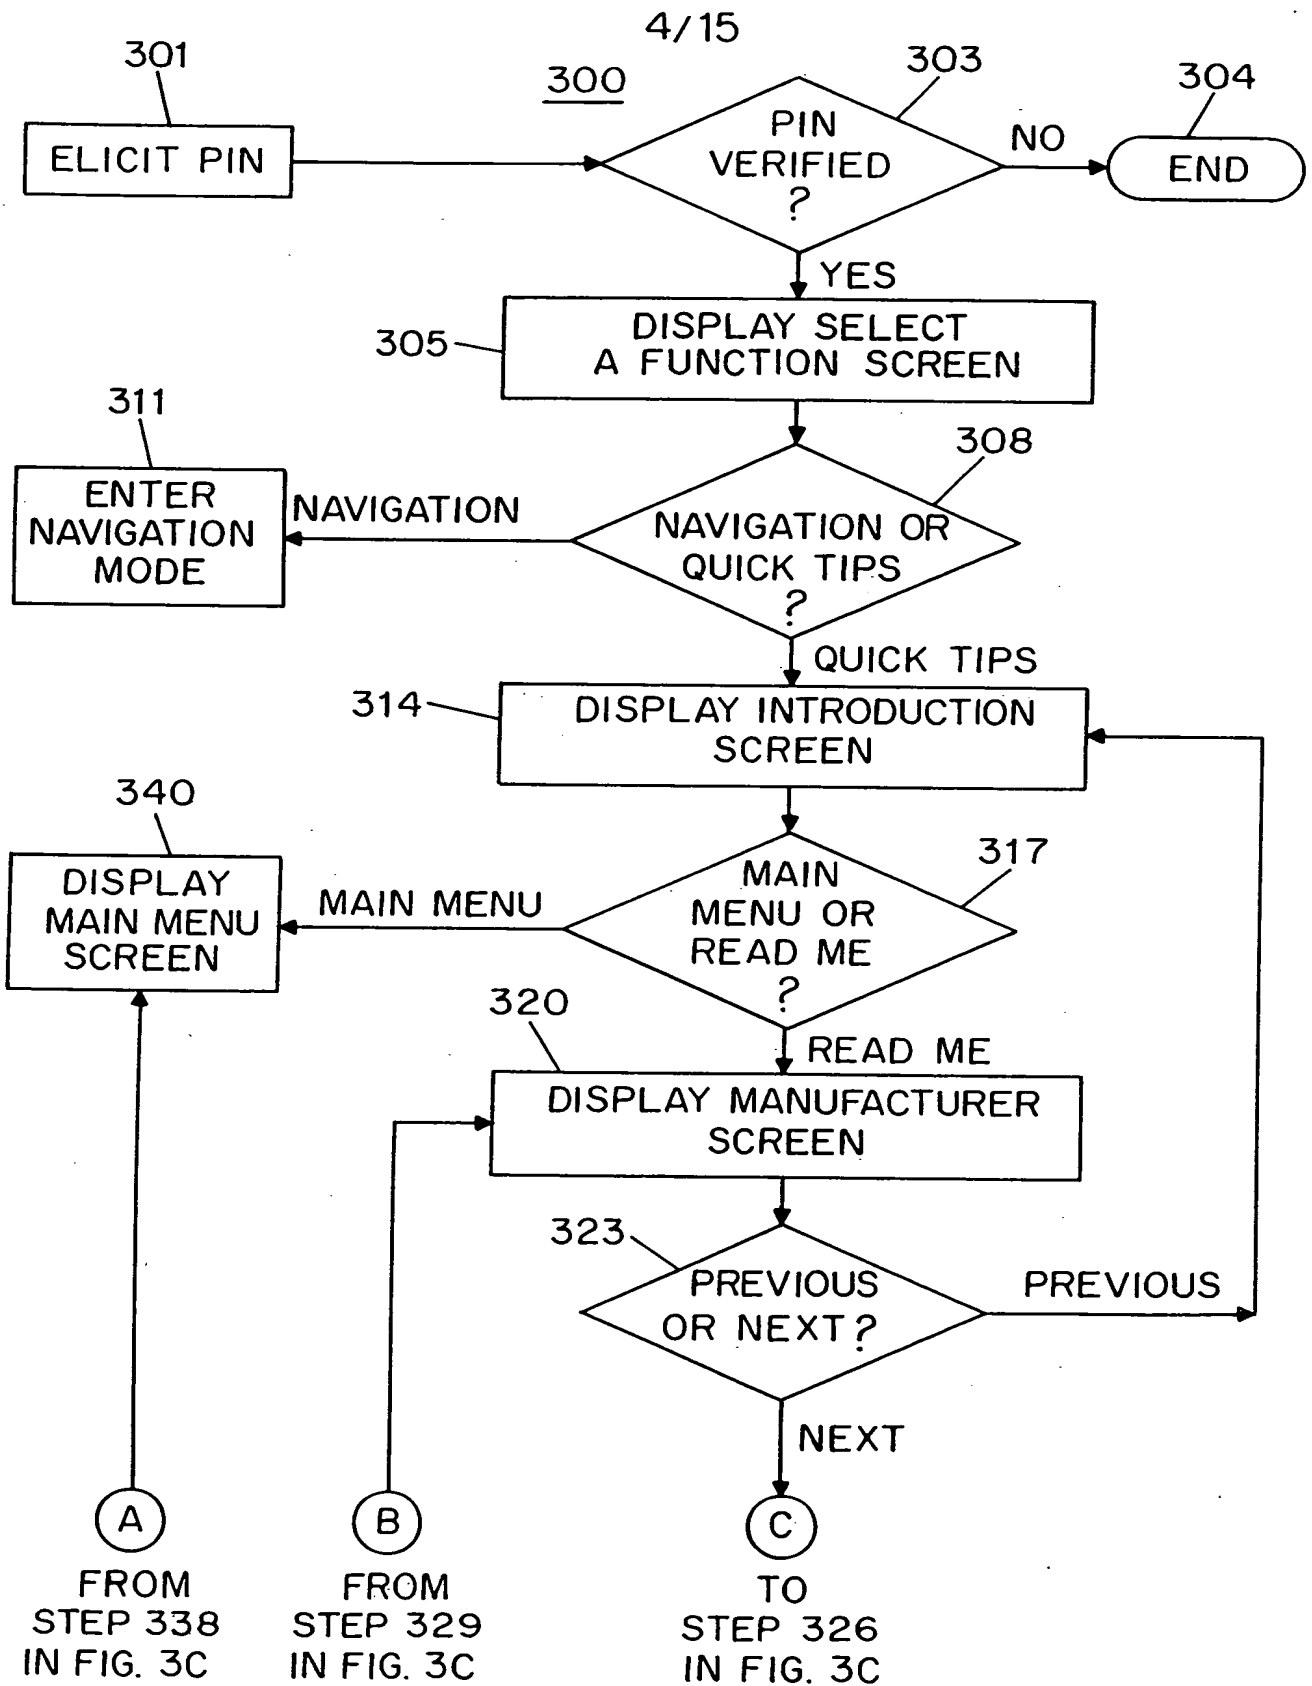


FIG. 3B

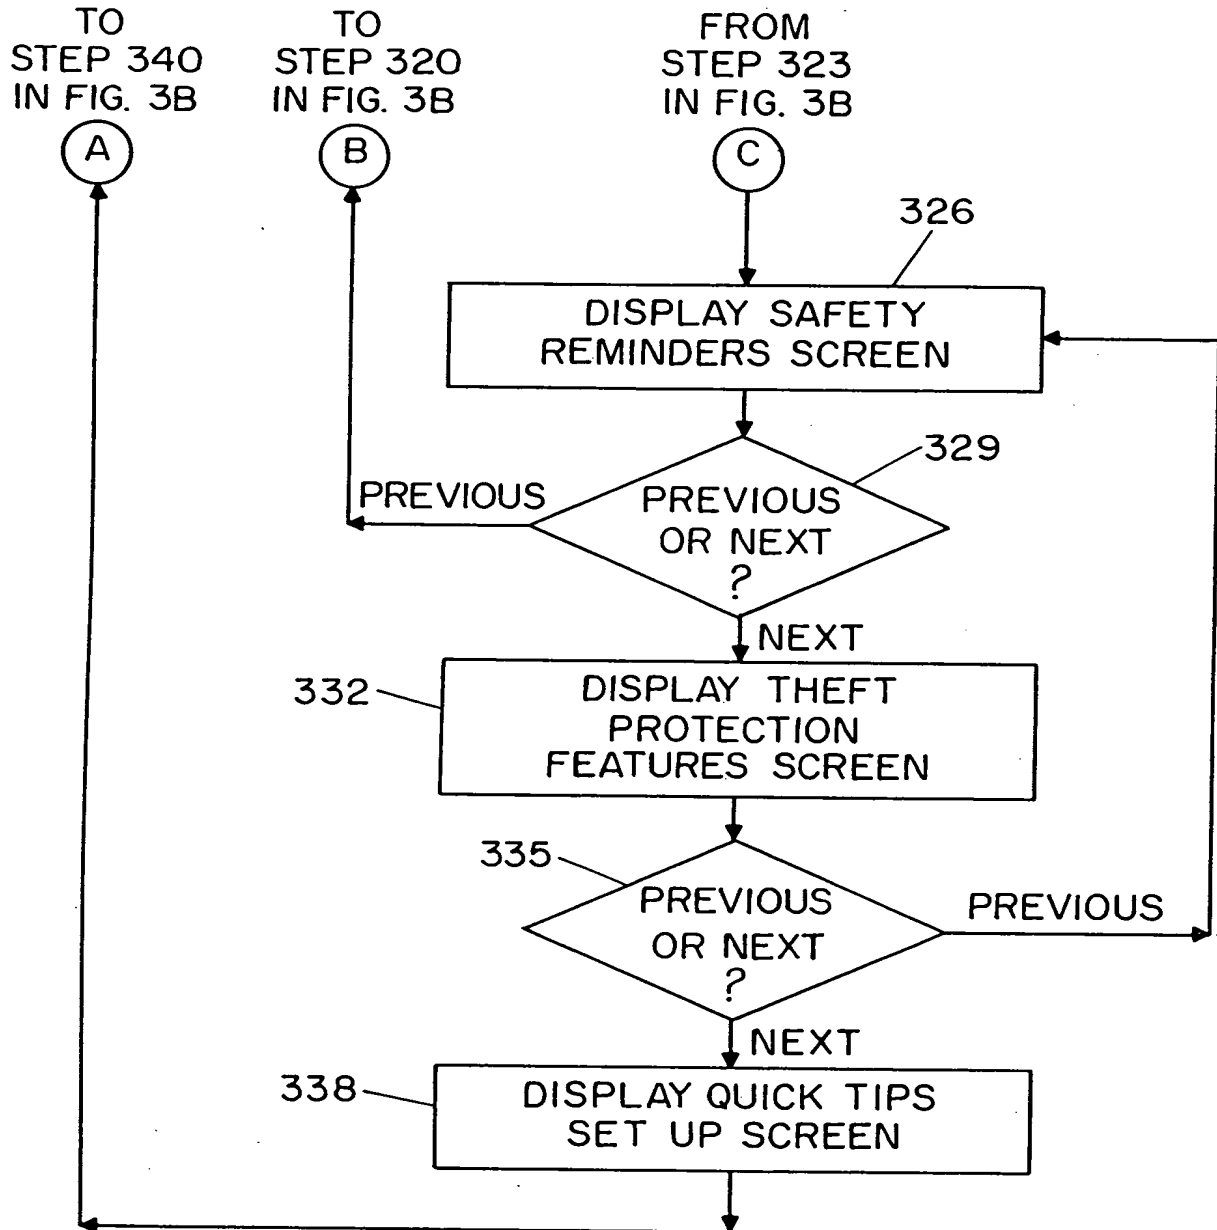


FIG. 3C

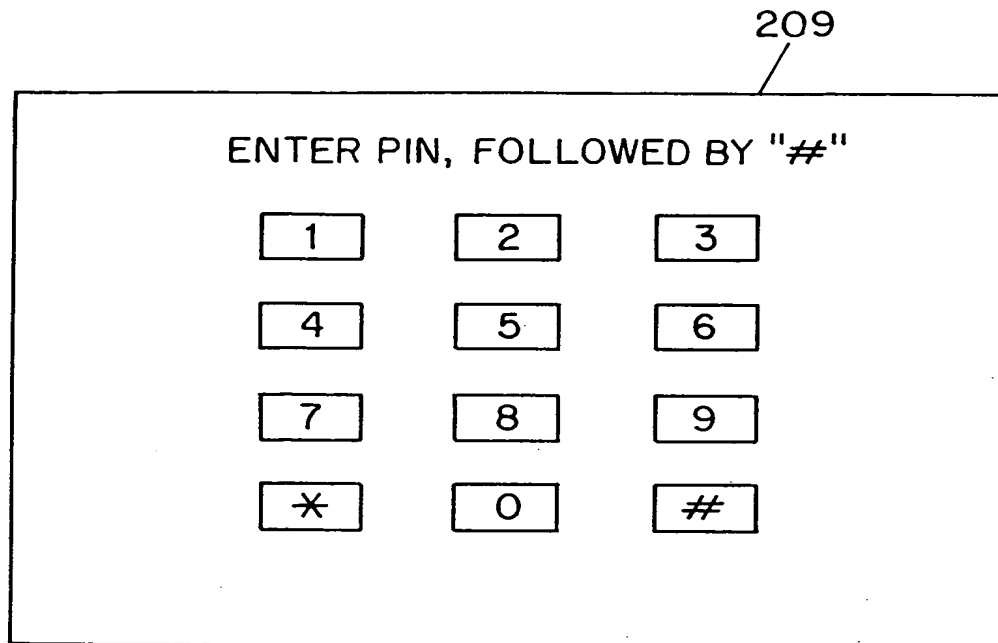


FIG. 4A

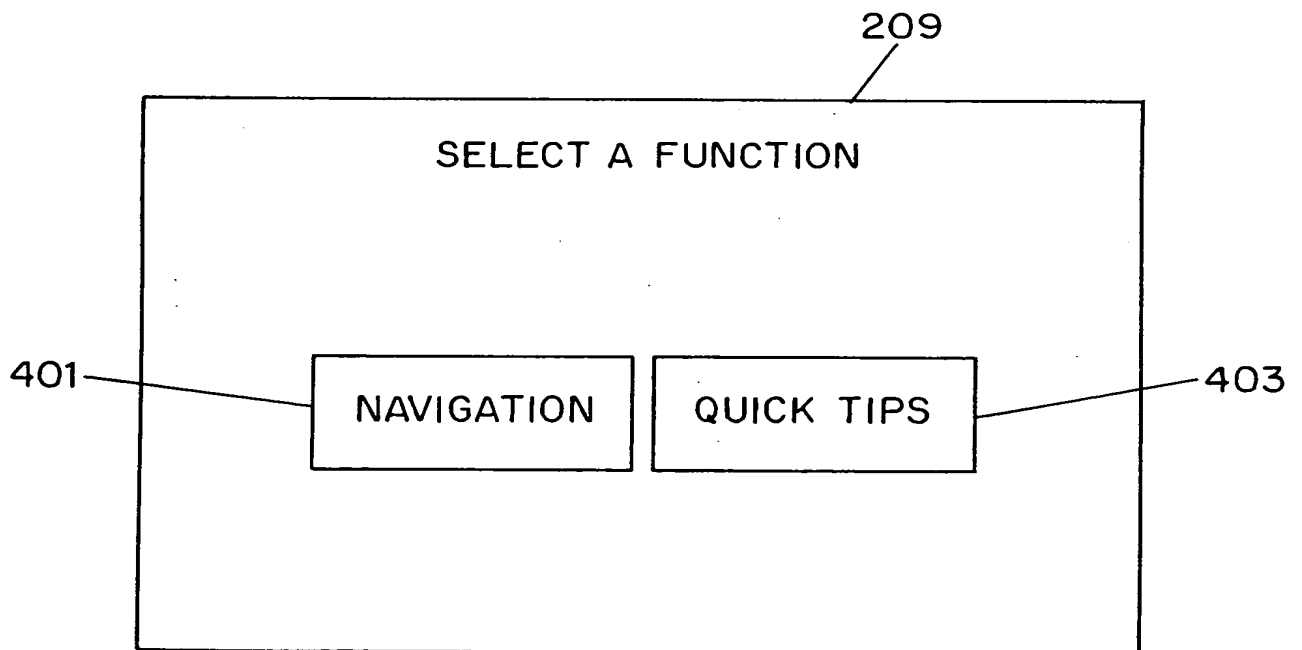


FIG. 4B

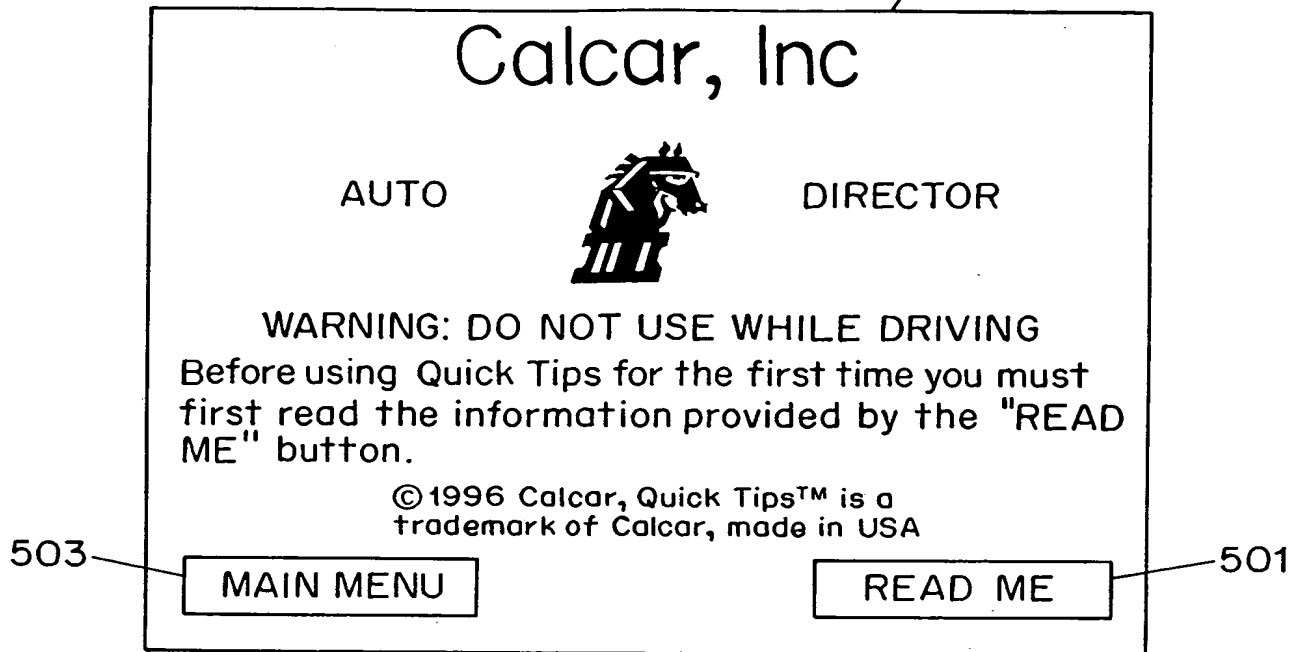


FIG. 5

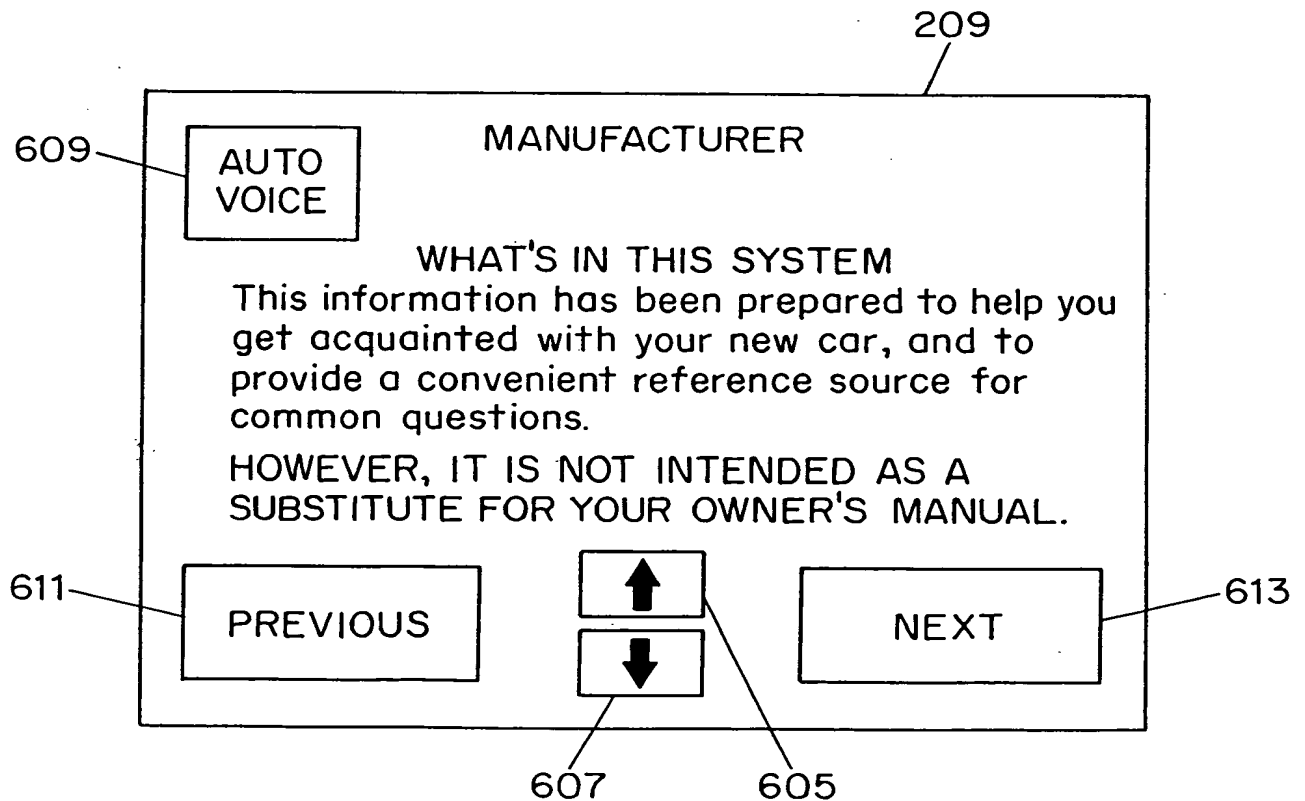


FIG. 6

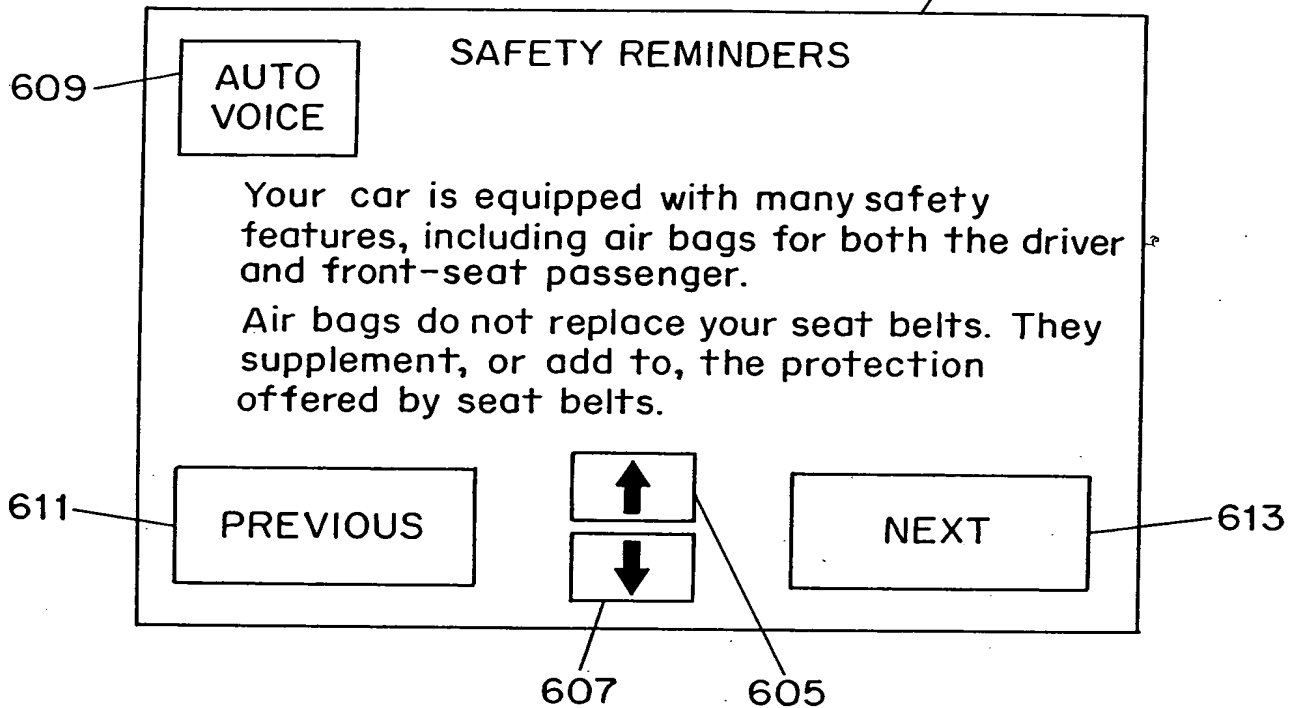


FIG. 7

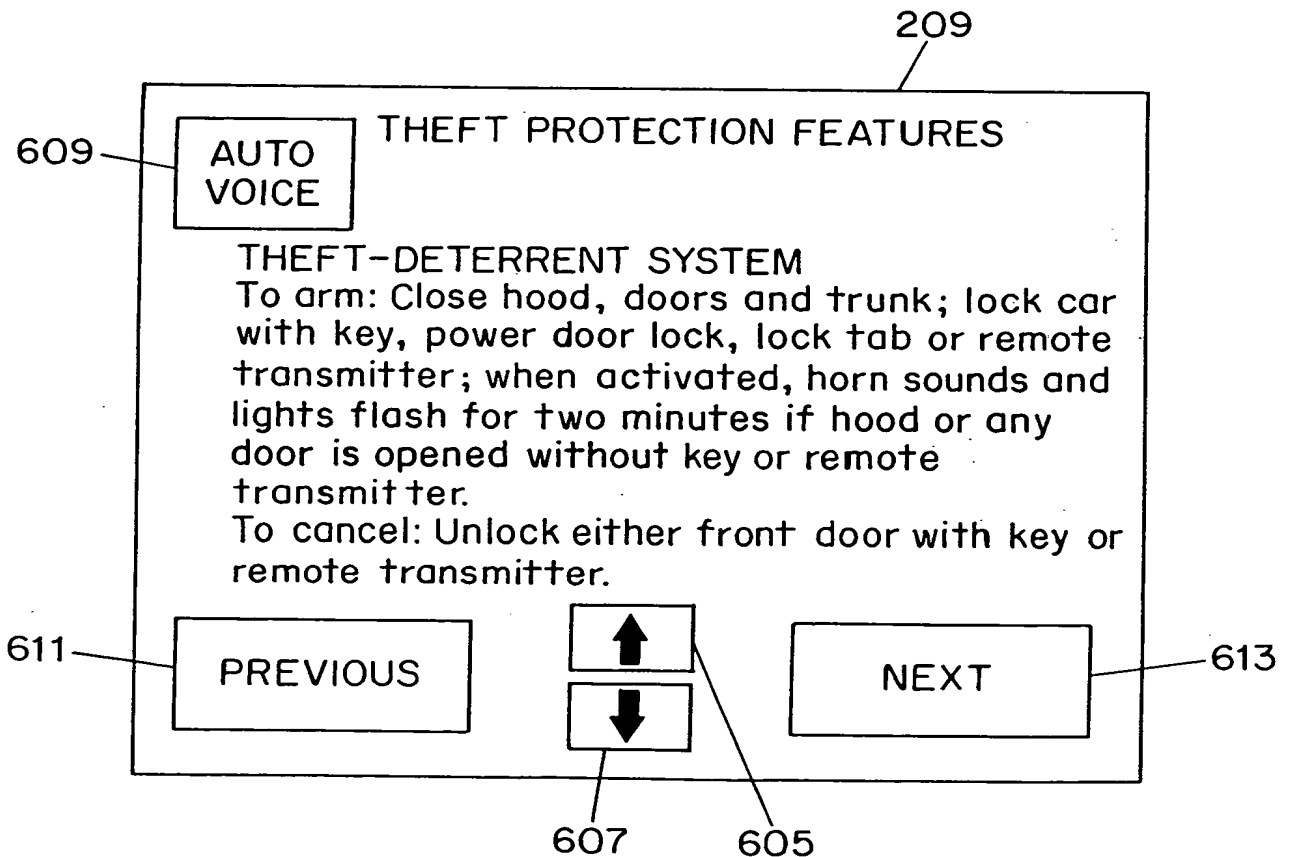


FIG. 8

9/15

209

QUICK TIPS SET-UP

VOLUME:

DISPLAY:

OFF	SOFT	MED	LOUD
OFF	DAY	NIGHT	AUTO

NEXT

FIG. 9

209

	DRIVER'S VIEW	INSTRUMENT PANEL	DOOR CONTROLS	DASH CONTROLS
1001a				
	STEERING COLUMN CONTROLS	SEATS	DRIVETRAIN	INTERIOR LIGHTS
1001b				
	LOCKS	CLIMATE CONTROLS	AUDIO SYSTEM	STORAGE
1001c				
	DRIVING TIPS	CARE TIPS	UNDER HOOD	MAINTENANCE
1001d				
	INDEX			
1001e				

1001
1003
1005
1007

FIG. 10

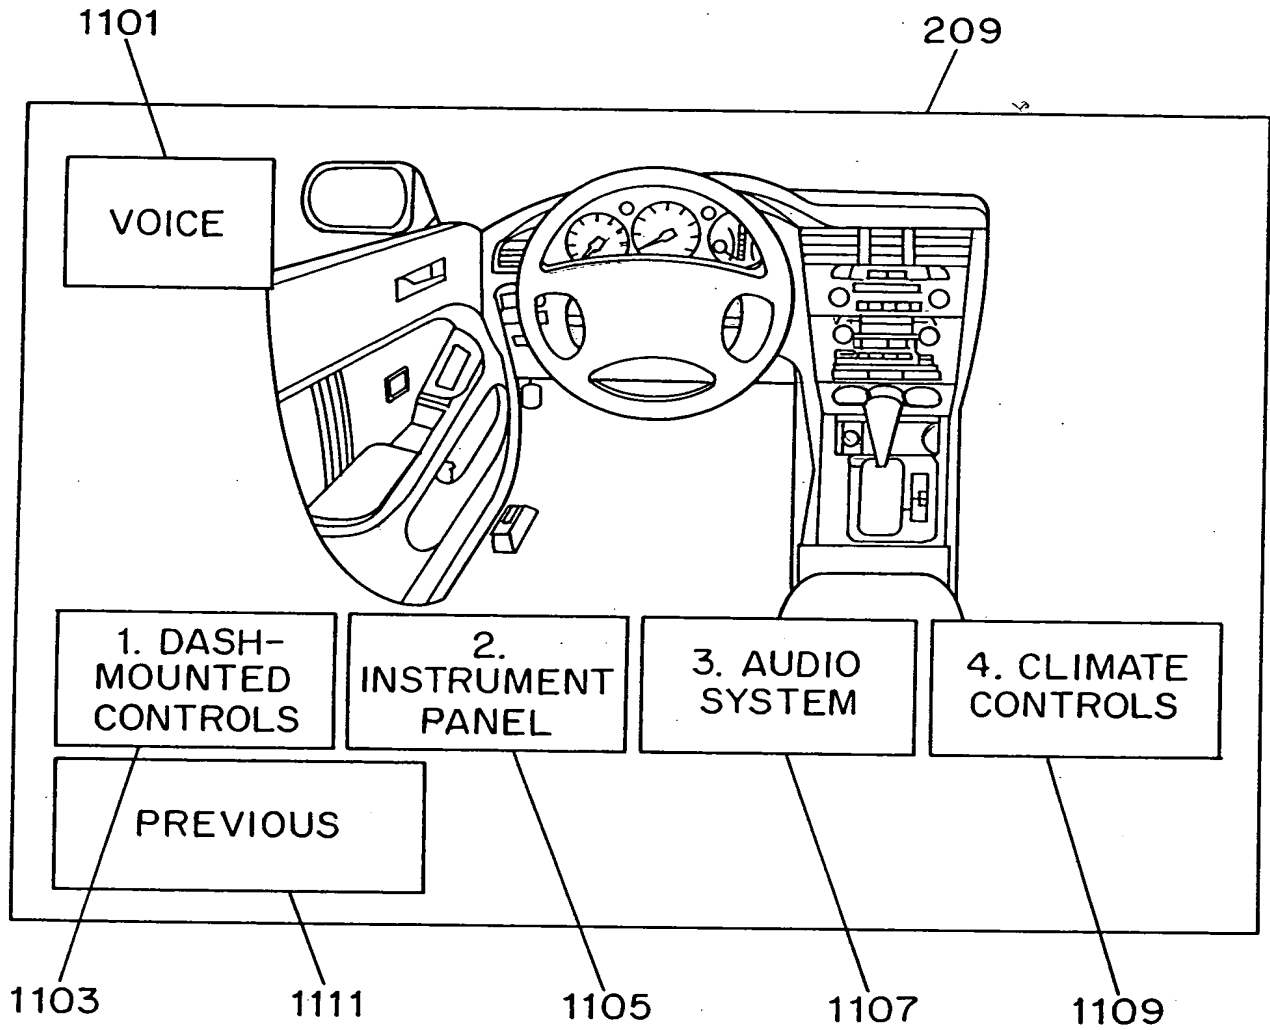


FIG. 11

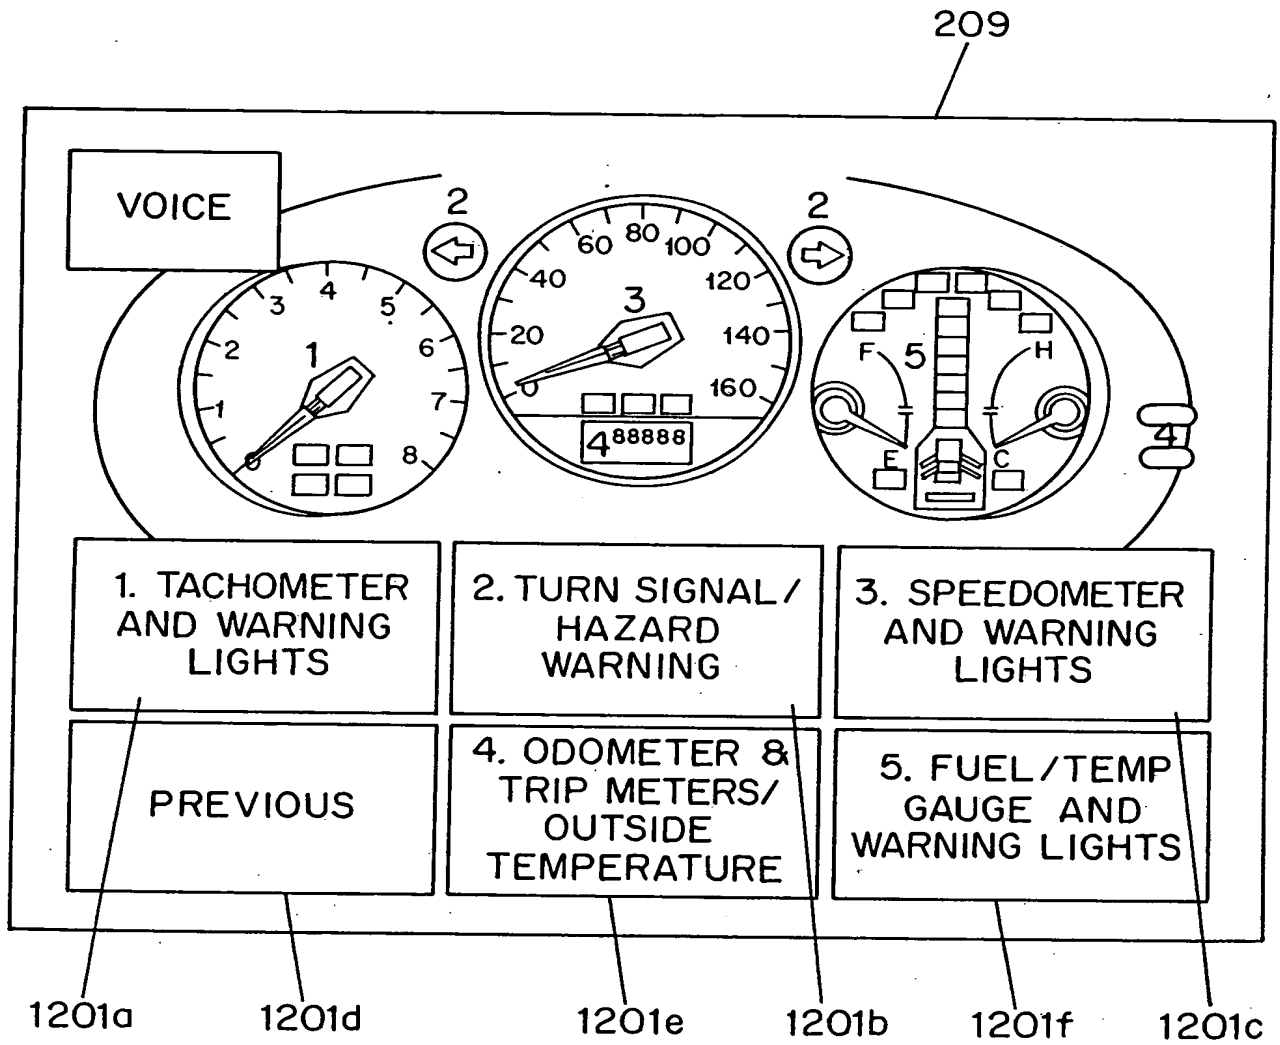


FIG. 12

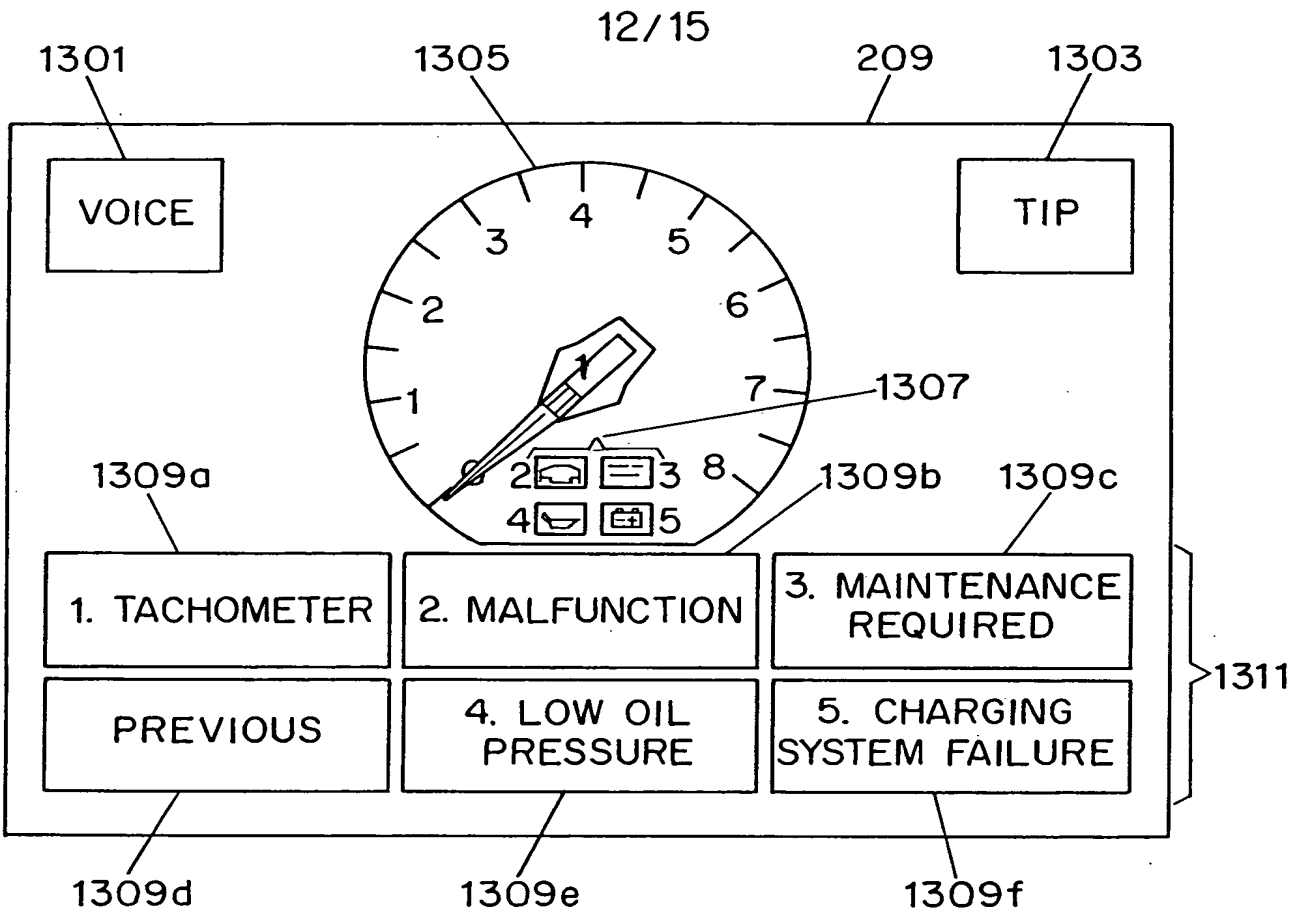


FIG. 13

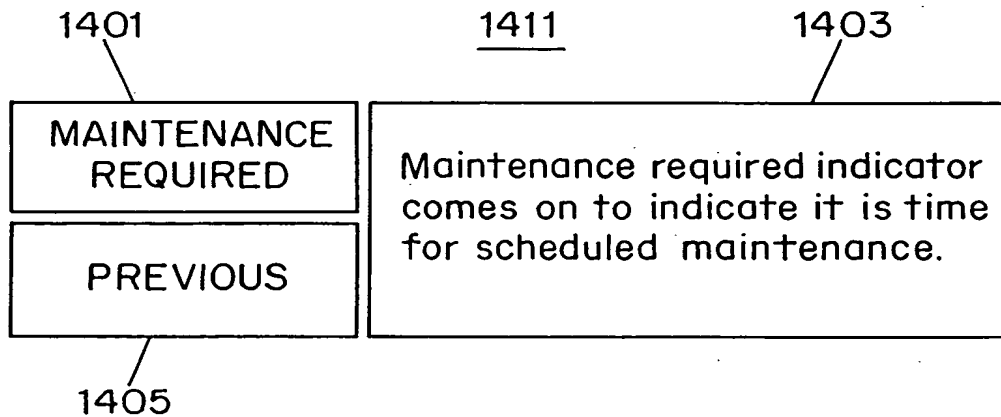


FIG. 14

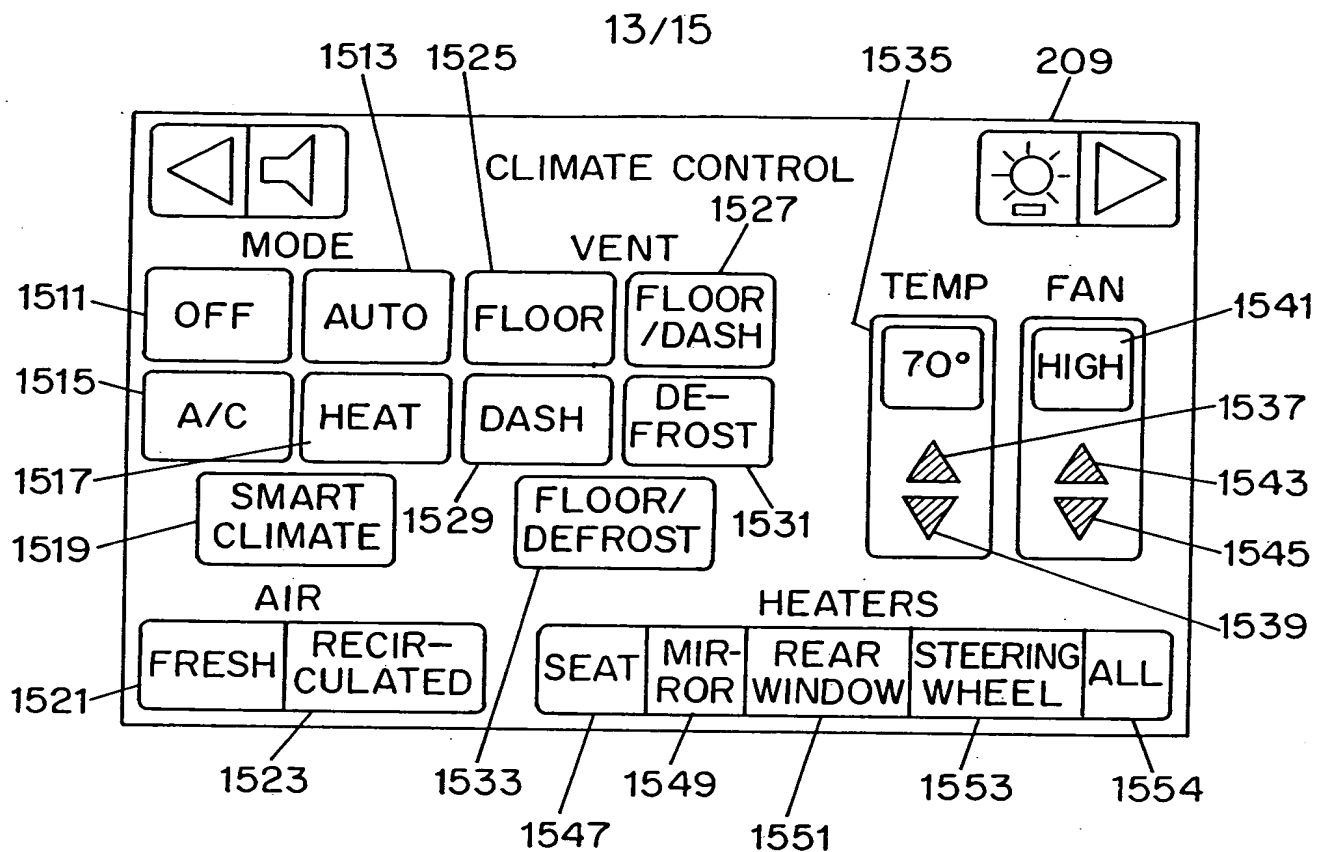


FIG. 15

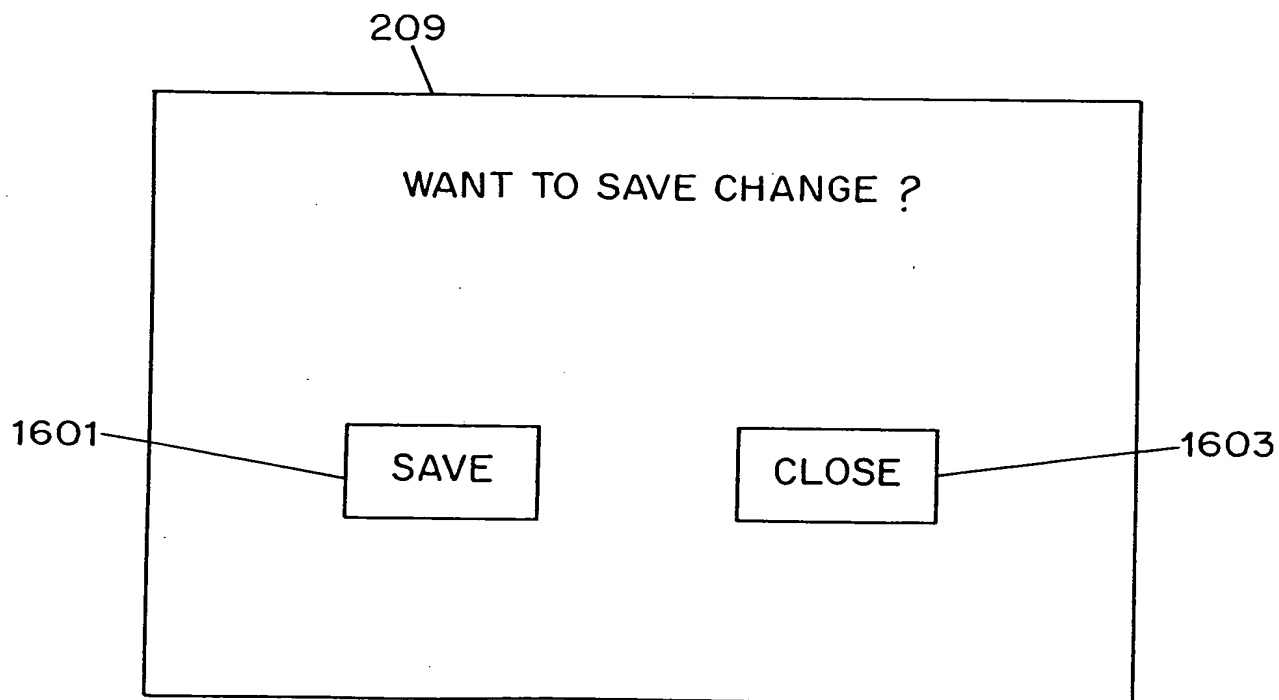


FIG. 16

209

ENTER LETTER OR ITEM NAME:

AIR CONDITIONING 1705

A	B	C	D	E	F	G	H
I	J	K	L	M	N	O	P
Q	R	S	T	U	V	W	X
Y	Z						

1701

DONE 1703

FIG. 17

209

INDEX

AIR CONDITIONING

ANTI-LOCK BRAKE SYSTEM INDICATOR

AUTOMATIC CLIMATE CONTROL

AUTOMATIC TRANSMISSION

SHIFT LEVER POSITION INDICATOR

1805 PREVIOUS 1801 1803

FIG. 18

1901

1903

1905	AIR CONDITIONING	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15
	ANTI-LOCK BRAKE SYSTEM INDICATOR	LINK TO WARNING LIGHT OPTION #4 ON FUEL /TEMP SCREEN (NOT SHOWN)
	AUTOMATIC CLIMATE CONTROL	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15
•	•	•
•	•	•
•	•	•
	CHARGING SYSTEM FAILURE INDICATOR	LINK TO CHARGING SYSTEM FAILURE OPTION 1309f (FIG. 13)
	CLIMATE CONTROL SYSTEM	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15
	COOLING	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15
	CRUISE CONTROL INDICATOR	LINK TO WARNING LIGHT OPTION #2 ON SPEEDOMETER SCREEN (NOT SHOWN)
	DEFOG/DEFROST	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15
	DOOR AJAR INDICATOR	LINK TO WARNING LIGHT OPTION #7 ON FUEL/TEMP SCREEN (NOT SHOWN)
	DIRECTIONAL SIGNALS INDICATOR	LINK TO TURN SIGNAL/HAZARD WARNING OPTION 1201b (FIG. 12)
•	•	•
•	•	•
•	•	•

15/15

FIG. 19